

# 200-1B SCOPE-MOBILE



## **DATA SHEET**


NO. 062-1533-00

DATE OCT 1972



COPYRIGHT © 1972  
TEKTRONIX INC.  
ALL RIGHTS RESERVED


## 200-1B SCOPE-MOBILE

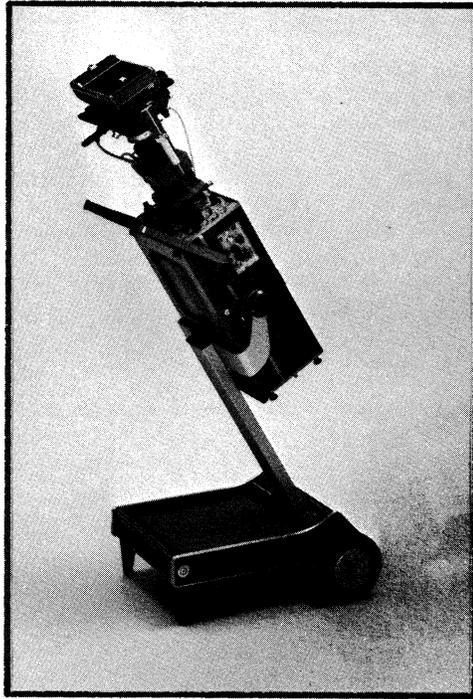

This specially designed scope-mobile can be utilized with a full complement of camera equipment. But when using it in this situation, it is advisable that the tray be in the latch position as shown. This stabilizes the instrument, insuring motionless position when the camera is being used to capture a specific waveform.



When transporting the scope-mobile, place the tray in the latch position as shown. It may be easily moved up or down stairs and from one area to another.

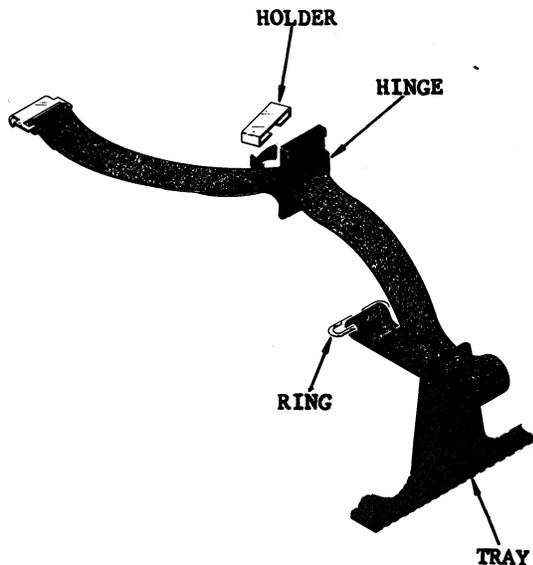

To attach strap assembly to the tray, thread plain end through double slotted side as shown. Make the strap configuration similar to the diagram. When you have the approximate length to secure the instrument to the scope-mobile, insert the ring through the loop in the strap and cinch up tight. Slip the holder onto the strap and slide to the approximate position shown in the diagram.

Hook the free end through the single slot in the tray. Press the black hinge flat against the strap atop the instrument and position holder in slot of hinge.

If instrument is not securely strapped to the tray, slip back the holder releasing pressure and take up slack at the double slotted side of the tray.